

Datasheet Evaluation Kit EK-H4

For SHT7x and SHT2x Humidity and Temperature Sensors

- Ready to use Hard and Software
- Suitable for data-logging experiments
- Programmable Interface
- Dew Point and Energy Calculation
- Multiple EKH4 Devices lockable



Product Summary

The evaluation kit EK-H4 is made for running Sensirion's humidity and temperature sensors and display measured values. It is able to communicate with SHT1x, SHT7x as well as the new generation SHT2x and display the measurement values on a display on the multiplexer. The purpose of such evaluation kit is to demonstrate the unique performance of Sensirion's humidity and temperature sensors without any own hard or software design work.

In connection with a computer and specific software supplied with the evaluation kit it may also be used as a data-logger for simple experimental measurements. The multiplexer with 4 ports is connected to the computer via USB interface. The software may record and display humidity and temperature values as well as calculated values of dew point and power consumption. Various EK-H4 may be run by same software across various USB interfaces.

Dimensions

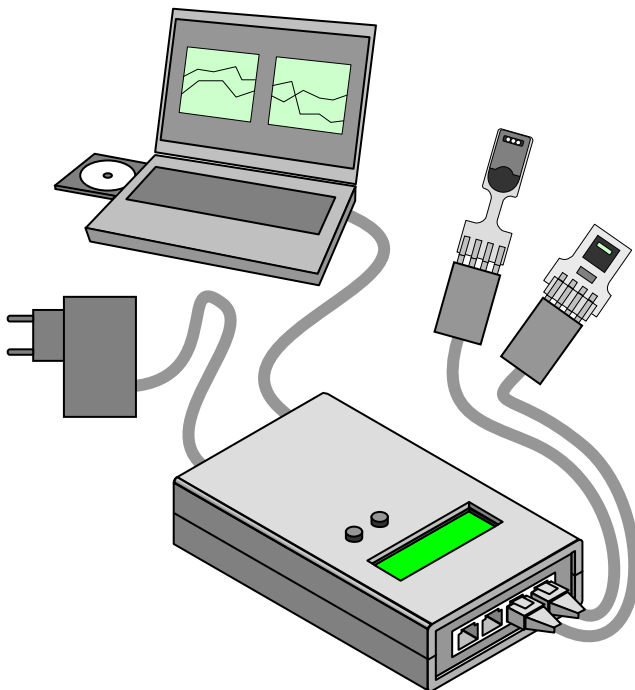


Figure 1 Schematic of Evaluation Kit EK-H4. Multiplexer box works without connection to computer but using a power plug. Optionally multiplexer box may be connected to computer with data-logger software for recording and displaying data readings.

Material Contents

EK-H4 contains the following components, enclosed in a handy suitcase:

- **1 EK-H4 multiplexer box:** Providing 4 channels for sensor cables, one port for power supply cable and one port for optional USB interface with a computer. Measured values may be read from a display on the multiplexer.
- **4 SHT71 sensors:** Pin type sensor with version 4 sensor chip. Please refer to datasheet SHT7x for more details.
- **4 SHT21 sensors:** SMD type, DFN 3-0 packaged sensors with version 5 sensor chip mounted to small PCB with connector. Please refer to datasheet SHT21 for more details.
- **4 Sensor cables** with RJ45 plug for connecting sensors with multiplexer box.
- **1 USB cable** for PC connection.
- **1 Power supply unit** with US, EU, AU adapter.
- **1 Compact disc** with multi viewer software for running EK-H4 as a data-logger.

Specification

Electrical specification:

| Parameter | min | typ | max | Unit | |
|------------------------|--|------|------|------------------|----|
| External Supply | Input Voltage | 8 | 9 | 10 | V |
| | Input Voltage Ripple | | | 0.5 | V |
| | Supply Current | | 170 | 280 | mA |
| USB Supply | Input Voltage | 4.75 | 5 | 5.25 | V |
| | Supply Current | | 170 | 280 | mA |
| Sensor Supply Voltage | Range | 2.1 | 3.0 | 3.6 | V |
| | Resolution | | 0.1 | | V |
| | Accuracy | | 2 | 5 | % |
| | Output current | | 40 | 110 ¹ | mA |
| Temperature Resolution | 11 | | 14 | Bit | |
| Humidity Resolution | 8 | | 12 | Bit | |
| Measurement interval | 1 | | 1440 | s | |
| Communication | USB (via Virtual Com Port (VCP)) | | | | |
| Storage | 10 – 50°C (0 – 125°C peak), 20 – 60%RH | | | | |

Default Configuration

Initial configuration set for the default mode (Values can be changed by using the measurement software)

| Parameter | Default value | |
|------------------------|---------------|-----|
| Sensor Supply Voltage | 3.0 V | |
| Temperature Resolution | 12 Bit | |
| Humidity Resolution | 12 Bit | |
| Measurement interval | 1 s | |
| Heater | off | |
| OTP reload | SHT7x | on |
| | SHT2x | off |

Power Supply

| Used Connection | EK-H4 supplied from |
|-----------------|---------------------|
| DC | DC (9V) |
| DC and USB | DC (9V) |
| USB | USB (5V) |


The EK-H4 may be supplied by DC Power Supply Unit at 9V or USB connection at 5V. Power supply by USB is only possible if USB driver is installed correctly.

| Pin | Name | Comment |
|-----|------------------|-----------|
| - | GND | Ground |
| + | Positive Voltage | 9V Supply |


Table 1 DC Power Supply: Pin Diagram

¹ short circuit current

EK-H4 Circuit Board

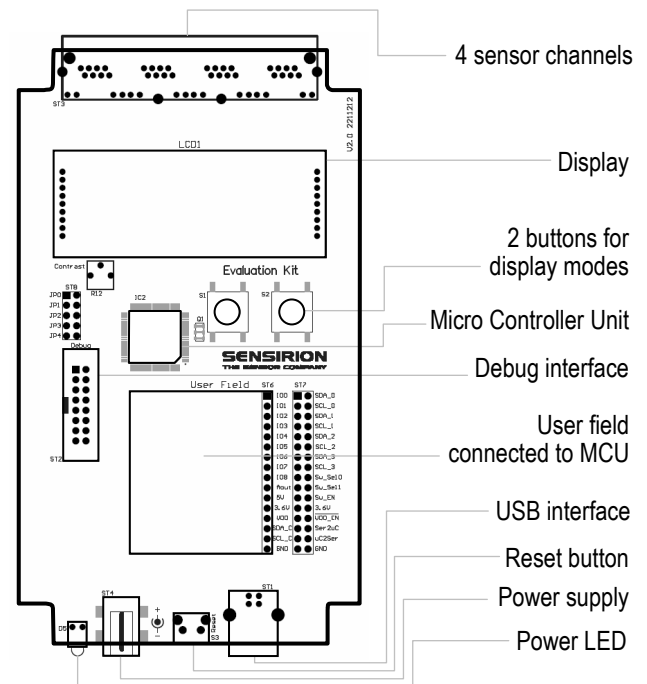

EK-H4 Pin Assignment

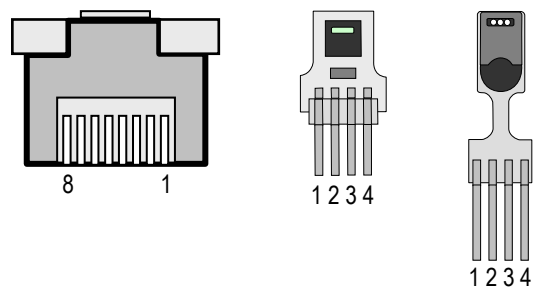

| RJ45 Pin | Sensor Pin | Name | Description |
|----------|------------|------|----------------|
| 1 | 3 | VSS | Ground |
| 3 | 1 | SCL | Serial clock |
| 5 | 2 | VDD | Supply voltage |
| 7 | 4 | SDA | Serial data |

Table 2 Pin Assignments: Female RJ45 pin diagram on the left – SHT21 and SHT71 sensors on the right of the upper panel.

LED Functions

| LED | Function | |
|----------------|---|----------------------------|
| Power LED | LED off denotes low supply voltage (DC < 8V, USB < 4.75V) or not connected. | |
| RJ45 Connector | Green LED | Sensor detected |
| | Orange LED | Measurement is in progress |

EK-H4 Users Guide

Evaluation Kit Features

The Evaluation Kit EK-H4 may be used as a stand-alone device, displaying measured values on the screen on the multiplexer or – connected to a computer – as a data-logger run by multi-viewer software.

The stand-alone device displays temperature and humidity values of each connected sensor plus dew-point derived from the measured two values.

Besides the above mentioned values the data-logger software displays calculated absolute humidity and power consumption. Furthermore, supply voltage, sensor resolution and measurement frequency can be chosen in a certain range and the on-chip heater may be plugged on and off. Eventually measured data can be exported for data processing.

1 Stand-Alone Evaluation Kit

1.1 Getting Started

Set up and application of the stand-alone device is straight forward:

1. Select multiplexer box, power supply cable, sensors with sensor cables as many as needed.
2. Connect sensors via sensor cables to the multiplexer box.
3. Connect multiplexer box via power supply cable to power (voltage supply also may occur via USB cable from a computer).
4. As soon as the green LED light is shining, the measurement starts automatically.

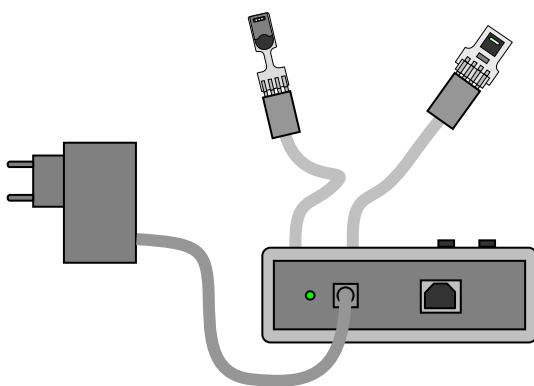


Figure 2 Stand-Alone Evaluation Kit. Voltage supply to be set in the range of AC 80 ... 250V.

1.2 Display Information

After powering the EK-H4 as standalone measurement tool the screen shows following information:

```
Sensirion
Evaluation Kit
for SHTxx
EKH4 V1.0
```

The first screen shows an overview over the connected sensors. In the first row the sensor number, which can be matched with the printed number on the cover, is visible. In the second column the temperature is displayed in °C. The third column shows the relative humidity. Not connected sensor ports are displayed with "--.--".

```
1    25.45°C    45.32%RH
2    --.--°C   --.--%RH
3    24.98°C    46.27%RH
4    25.71°C    45.46%RH
```

By pressing the buttons the displayed information can be switched from all sensors to the respective single sensors:

Right button: Sensor 1 → 2 → 3 → 4 → all → 1

Left button: Sensor 4 → 3 → 2 → 1 → all → 4

The displayed information by choosing only one sensor is as following:

```
Sensor 1:      SHT7x
Temperature:   25.45°C
Humidity RH:   45.32%
Dew Point:    16.76°C
```

If no sensor is connected to the chosen port sensor designation is replaced with "no sens".

To execute a self test for testing the sensor ports and voltage supply both buttons must be pressed for longer than one second. For a successful self test each port requires a sensor to be connected. If no sensor is connected the corresponding port will show an error.

```
Sens 1: OK      3: OK
Sens 2: OK      4: OK
Sensor Supply   : OK
EKH4 Supply     : OK
```

By pressing one of the buttons the display information will switch back to the measurement.

2 Data-Logger with Software

Using the EK-H4 system as a data-logger requires the installation of the read-out software on a computer and connecting multiplexer box and computer via USB cable. Prior to this a driver installation may be necessary.

2.1 EK-H4 Driver Installation

Connect the EK-H4 multiplexer box to the computer via USB cable. EK-H4 uses a Silicon Laboratories CP210x USB to UART bridge controller. If a driver for this controller is not installed yet, a dialog pops up which helps you to search for a driver on the internet. Alternatively, the driver software may be installed from the EK-H4 compact disc.

2.2 Read-Out Software Installation

EK-H4 read-out software requires the .NET framework 2.0 or later. If it is not already installed on the computer, it may be downloaded from

<http://www.microsoft.com/downloads/>.

To install the EK-H4 software, simply copy the EK-H4 folder from the compact disc to the hard drive of the computer.

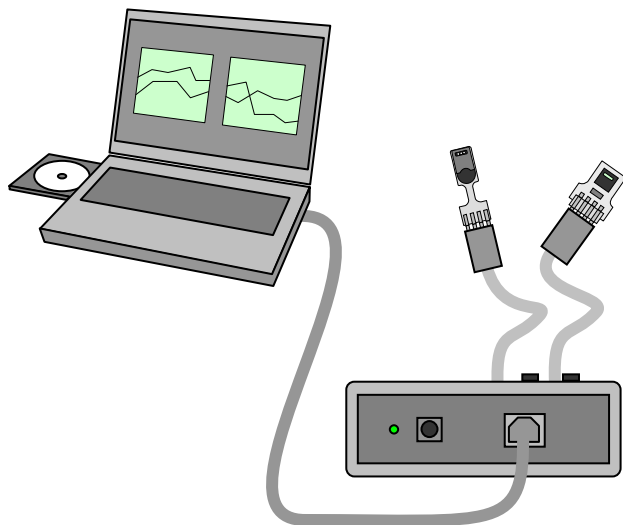


Figure 3 EK-H4 configuration with connection to read-out software on computer. No additional power supply is needed.

2.3 Starting a Measurement

Connect the EK-H4 multiplexer box with a USB cable to the computer and then start the software by double-clicking on **EKH4Viewer.exe**. The connect dialog displays the COM ports to which EK-H4 multiplexer boxes are connected – see Figure 4.

After clicking OK, a connection to the multiplexer box is established and the sensors are listed in the *Sensor Select* and *Measurement Data* sections – see Figure 5.

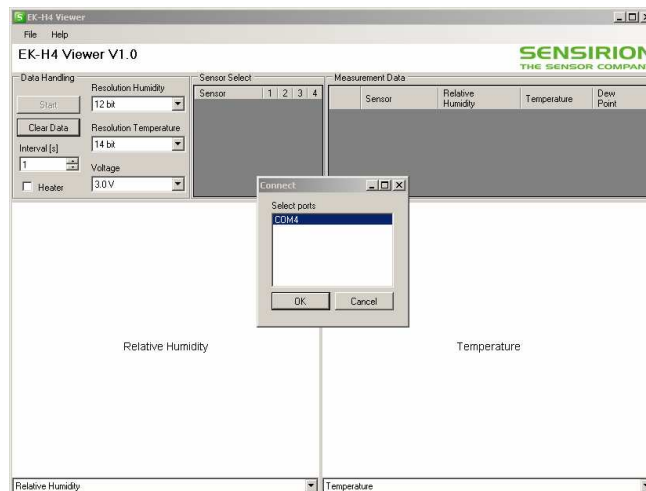


Figure 4 Connect dialog of read-out software. Window in the center displays COM ports with multiplexer boxes connected.

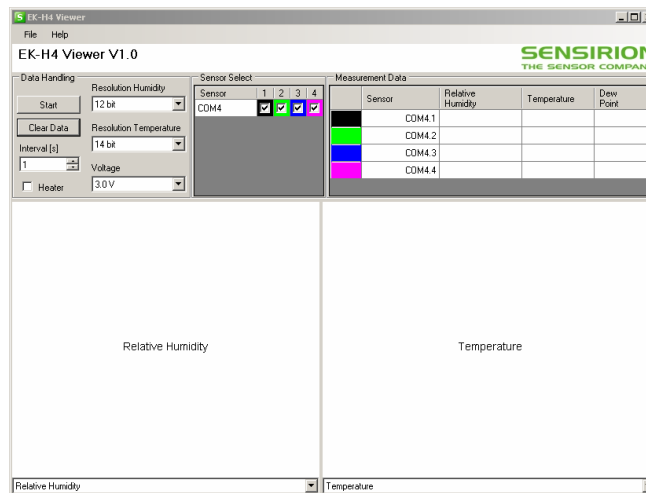


Figure 5 EK-H4 software window before measurement starts. Sensors are displayed in different colours.

2.4 Multiple EK-H4 Devices

EK-H4 read-out software is able to read sensors from various EK-H4 multiplexers. The different systems are selected via connect dialog at start-up or using the menu item *File/Connect*. To disconnect EK-H4 systems use the menu item *File/Disconnect*.

2.5 Temperature and Humidity Measurement

Measurements are started and stopped by the *Start/Stop* button. The measured data are displayed in the *Measurement Data* table. The measurements which are displayed in this table can be selected in the context menu which appears when the right mouse button is clicked on the table.

Two plots are available, which display the progress of a measurement over time. The measurement can be selected in the list below the plot. The scale of the axes can be altered by pressing the left mouse button on the axis and moving the mouse. The plot can be dragged using the left mouse button. The right mouse button can

be used to display a context menu, which offers functions to print or copy the plot, or to set auto-scale options for the axes.

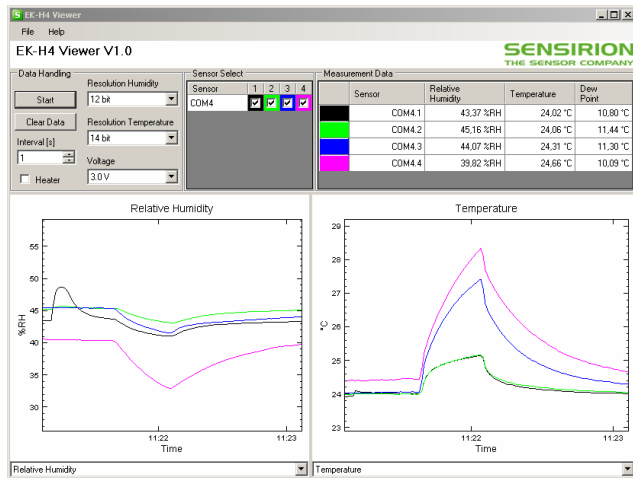


Figure 6 Software surface during measurement. Displayed values may be selected via menus at the bottom of the window.

2.6 Calculated Values

Relative humidity and temperature data are measured by the sensors. From this data **dew point** and **absolute humidity** values are derived.

Power consumption values are calculated based on sensor type and setting parameters. All these entities may be displayed in the graphs – to be selected by the menus at the bottom of the window. Please note: These data are not measured but simulated.

2.7 Settings

The *Data Handling* section contains controls for settings which affect all connected sensors. If SHT7x and SHT2x sensors are connected simultaneously only features from SHT7x sensors apply. By using only SHT2x sensors the full range of settings can be used. After disconnection default configuration is put in place.

| | SHT2x | SHT7x |
|----------------------|--------------------|--------------|
| Sensor Voltage | 2.1...3.6 V | 2.1...3.6 V |
| Temp. resolution | 11, 12, 13, 14 Bit | 12, 14 Bit |
| Humidity resolution | 8, 10, 11, 12 Bit | 8, 12 Bit |
| Heater | On, Off | On, Off |
| Measurement interval | 1 ... 1440 s | 1 ... 1440 s |

Table 3 Parameter ranges for the different sensor types.

2.8 Data Logging and Data Export

The data displayed in the measurement plots is kept in memory. The measured values can be exported to a CSV file using the menu item *File/Export Data*. The

measurement data can be cleared with the *Clear Data* button. Because the data memory is limited, long-running measurements should be logged directly to disk. Logging can be started and stopped using the menu item *File/Log to File*.

2.9 Sensor and EK-H4 Properties

Information about the sensors and evaluation kits can be displayed with the *Properties* command in the context menu of the cells in the *Sensor Select* table.

2.10 License Information

The EK-H4 viewer software uses the NPlot charting library, to which the following license applies:

NPlot - A charting library for .NET
Copyright (C) 2003-2006 Matt Howlett and others.
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of NPlot nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Revision History

| Date | Version | Page(s) | Changes |
|----------|---------|---------|-----------------|
| May 2007 | 1.0 | 1 – 6 | Initial release |
| | | | |
| | | | |

Important Notices

Warning, Personal Injury

Do not use this product as safety or emergency stop devices or in any other application where failure of the product could result in personal injury. Do not use this product for applications other than its intended and authorized use. Before installing, handling, using or servicing this product, please consult the data sheet and application notes. Failure to comply with these instructions could result in death or serious injury.

If the Buyer shall purchase or use SENSIRION products for any unintended or unauthorized application, Buyer shall defend, indemnify and hold harmless SENSIRION and its officers, employees, subsidiaries, affiliates and distributors against all claims, costs, damages and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if SENSIRION shall be allegedly negligent with respect to the design or the manufacture of the product.

ESD Precautions

The inherent design of this component causes it to be sensitive to electrostatic discharge (ESD). To prevent ESD-induced damage and/or degradation, take customary and statutory ESD precautions when handling this product.

See application note "ESD, Latchup and EMC" for more information.

Warranty

SENSIRION warrants solely to the original purchaser of this product for a period of 12 months (one year) from the date of delivery that this product shall be of the quality, material and workmanship defined in SENSIRION's published specifications of the product. Within such period, if proven to be defective, SENSIRION shall repair and/or replace this product, in SENSIRION's discretion, free of charge to the Buyer, provided that:

- notice in writing describing the defects shall be given to SENSIRION within fourteen (14) days after their appearance;

- such defects shall be found, to SENSIRION's reasonable satisfaction, to have arisen from SENSIRION's faulty design, material, or workmanship;
- the defective product shall be returned to SENSIRION's factory at the Buyer's expense; and
- the warranty period for any repaired or replaced product shall be limited to the unexpired portion of the original period.

This warranty does not apply to any equipment which has not been installed and used within the specifications recommended by SENSIRION for the intended and proper use of the equipment. EXCEPT FOR THE WARRANTIES EXPRESSLY SET FORTH HEREIN, SENSIRION MAKES NO WARRANTIES, EITHER EXPRESS OR IMPLIED, WITH RESPECT TO THE PRODUCT. ANY AND ALL WARRANTIES, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY EXCLUDED AND DECLINED.

SENSIRION is only liable for defects of this product arising under the conditions of operation provided for in the data sheet and proper use of the goods. SENSIRION explicitly disclaims all warranties, express or implied, for any period during which the goods are operated or stored not in accordance with the technical specifications.

SENSIRION does not assume any liability arising out of any application or use of any product or circuit and specifically disclaims any and all liability, including without limitation consequential or incidental damages. All operating parameters, including without limitation recommended parameters, must be validated for each customer's applications by customer's technical experts. Recommended parameters can and do vary in different applications.

SENSIRION reserves the right, without further notice, (i) to change the product specifications and/or the information in this document and (ii) to improve reliability, functions and design of this product.

Copyright© 2009, SENSIRION.
CMOSens® is a trademark of Sensirion
All rights reserved

Headquarter and Sales Offices

Headquarter

SENSIRION AG
Laubisruetistr. 50
CH-8712 Staefa ZH
Switzerland

Phone: +41 44 306 40 00
Fax: +41 44 306 40 30
info@sensirion.com
<http://www.sensirion.com/>

Sales Office USA:

SENSIRION Inc.
2801 Townsgate Rd., Suite 204
Westlake Village, CA 91361
USA

Phone: +1 805 409 4900
Fax: +1 805 435 0467
michael.karst@sensirion.com
<http://www.sensirion.com/>

Sales Office Japan:

SENSIRION JAPAN Co. Ltd.
Postal Code: 108-0074
Shinagawa Station Bldg. 7F,
4-23-5, Takanawa, Minato-ku
Tokyo, Japan

Phone: +81 3 3444 4940
Fax: +81 3 3444 4939
info@sensirion.co.jp
<http://www.sensirion.co.jp>

Sales Office Korea:

SENSIRION KOREA Co. Ltd.
#1414, Anyang Construction Tower B/D,
1112-1, Bisan-dong, Anyang-city
Gyeonggi-Province
South Korea

Phone: +82 31 440 9925~27
Fax: +82 31 440 9927
info@sensirion.co.kr
<http://www.sensirion.co.kr>

Sales Office China:

Sensirion China Co. Ltd.
Room 2411, Main Tower
Jin Zhong Huan Business Building,
Futian District, Shenzhen,
Postal Code 518048
PR China

phone: +86 755 8252 1501
fax: +86 755 8252 1580
info@sensirion.com.cn
www.sensirion.com.cn

Find your local representative at: <http://www.sensirion.com/reprs>